

**ASAHI  
PENTAX**

**110 WINDER**

 
 


## MINI-MAX FILM WINDER SPECIFICATIONS

<b>Type</b>	Battery-Powered Film Winder.
<b>Power Source</b>	Two 1.5V AA-size penlight batteries.
<b>Film Advance Mode</b>	Single-frame operation after shutter release via camera shutter button.
<b>Shutter-Speed</b>	
<b>Synchronization</b>	Operates at all shutter speeds.
<b>Mounting</b>	Mounts to tripod socket at base of camera.
<b>Other Features</b>	Tripod socket, built-in grip, power switch.
<b>Size</b>	52mm x 35mm x 100mm
<b>Weight</b>	112g/4.0ozs. (without batteries)

## REWINDER DESCRIPTION OF PARTS

1. Contact pins
2. Power switch
3. Attachment screw
4. Film drive coupler

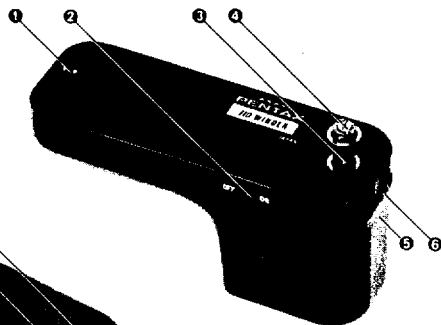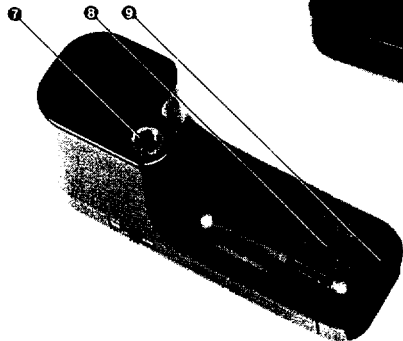


5. Handgrip
6. Lock dial
7. Tripod socket
8. Battery compartment lock
9. Battery compartment cover




## BATTERY LOADING

 - 1 Make sure that the winder power switch is set to OFF.
- 2 Holding the winder upside down, slide the battery compartment lock in the direction of the arrow with your fingernail and lift the cover out with your other hand.
- 3 Insert two AA size penlight batteries in the battery compartment in accordance with the (+) and (-) diagrams inside the compartment.

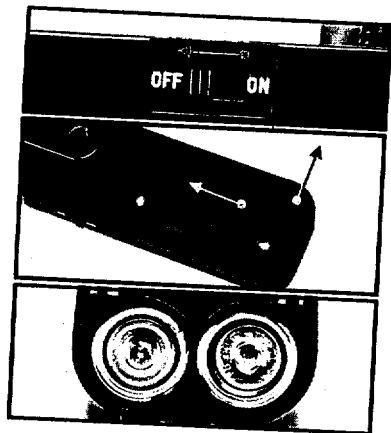


4 Replace the battery compartment cover by sliding the lock all the way back with your fingernail and snapping the cover back into place by inserting the bottom tabs **A** first, and then the top tab **B**. Let go of the lock lever to lock the cover in place.

 \* **Battery Check** When the film advance speed becomes slow and irregular, it indicates that batteries are worn. Replace both batteries together with high-performance AA-size (penlight) dry-cell batteries or alkaline batteries. Film will not advance if batteries are not inserted properly.

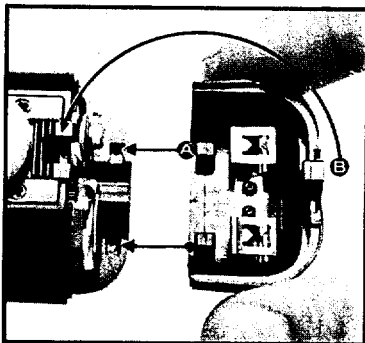

# ATTACHING THE WINDER

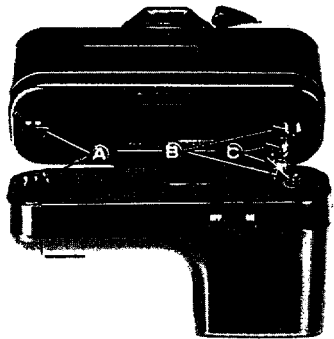 

1 Hold the back of camera at a right angle to the winder as illustrated, matching up each of the terminals **A**, **B** and **C** on both the winder and the camera with your eye.

2 Then, turn the camera so that it sets flat atop the winder, making sure that all the contact points have enmeshed properly.

3 Rotate the knurled lock dial on the side of the winder so that the winder screw attaches to the tripod socket of the camera. Tighten the dial firmly to secure the winder in place.

## FILM ADVANCE

**With new film:** After loading a fresh film cartridge into the AUTO 110, turn the winder power switch to ON. The film will advance automatically until the numeral "1" appears in the back cover window. The camera is now ready to shoot.

**With a previously loaded film cartridge:** If you attach the winder with a partially wound film cartridge already loaded in the camera, the winder will advance the film a single frame if you turn it on while the camera's film advance lever is uncocked. If the film advance lever is cocked when you turn the winder on, film will not advance until after you trip the shutter.





## SHOOTING

Bring the camera up to your eye and, after you have focused, press the shutter release to take the picture.

**Horizontal shooting posture:** Hold the winder and camera firmly as illustrated when shooting horizontally.

**Vertical shooting posture:** For vertical shooting with the winder, the camera should be braced as illustrated for added support. There is greater tendency for camera movement to occur when shooting vertically. Your pictures will blur if you do not hold the camera firmly as indicated.



## AFTER SHOOTING USING A TRIPOD

 
### When Finished Shooting

After the last exposure has been made, the film will automatically wind out until the film end and stop. Then, turn the winder power switch to OFF and remove the cartridge.

\* Always attach and detach the winder with the power switch set to OFF.

### Use of a Tripod

A tripod may be screwed into the tripod socket at the base of the winder grip.

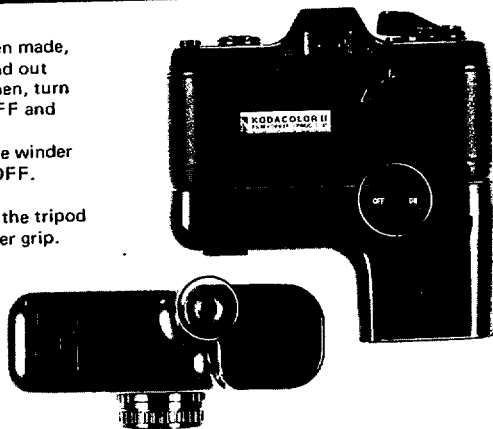



Asahi Optical Co., Ltd. C.P.O. 895, Tokyo 100-91, JAPAN  
Asahi Optical Europe N.V. Weveldlaan 3-5, 1930 Zaventem Zuid-7, BELGIUM  
Pentax Handelsgesellschaft mbH. 2000 Hamburg 54 (Lokstedt), Grandweg 64, WEST GERMANY  
Pentax Corporation 9 Inverness Drive East, Englewood, Colorado 80112, U.S.A.  
Pentax of Canada Ltd. 1760 West 3rd Avenue, Vancouver, B.C. V6J 1K5, CANADA  
Pentax U.K. Ltd. Pentax House, South Hill Avenue, South Harrow, Middlesex HA2 0LT, U.K.  
Asahi Optical Brasileira Ind. e Com. Ltda. Rua Estrelas Unidas, 1053, São Paulo-SP, BRASIL

06626

Printed in Japan