


PENTAXSM 110 WINDER II

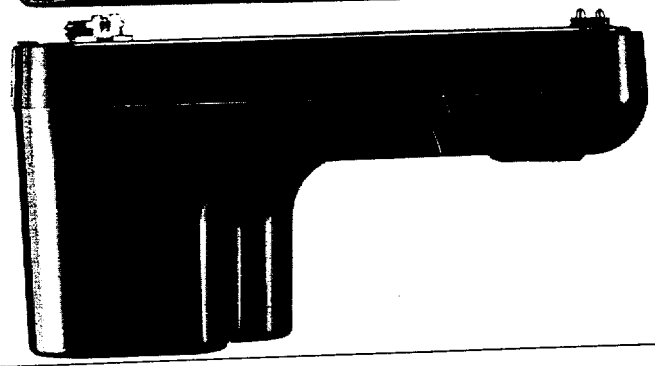



© 1981 Pentax Co. All rights reserved. Pentax is a registered trademark of Pentax Co. in the U.S. and other countries. Pentax 110 Winder II is a registered trademark of Pentax Co. in the U.S. and other countries.

SPECIFICATIONS

Type	Battery-Powered Film Winder.
Power Source	Two 1.5V AA-size penlight batteries (Manganese SUM-3 or Alkaline LR-6).
Film Advance Mode	Single-frame operation only possible with Auto 110. Both single-frame and consecutive operations possible with Auto 110 Super via camera shutter release button.
Mounting	Mounts to tripod socket at base of camera.
Other Features	Tripod socket, built-in grip, power switch.
Size	99mm (W) x 52mm (H) x 34mm (D)
Weight	110g/3.88" less batteries.

DESCRIPTION OF PARTS


- ① Contact pins
- ② Power switch
- ③ Attachment screw
- ④ Film drive coupler

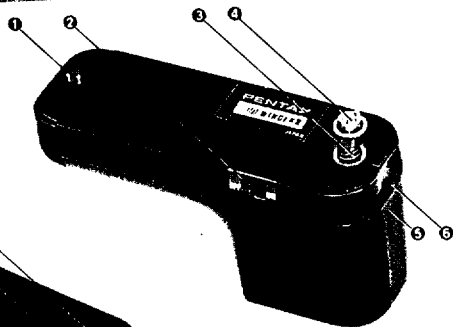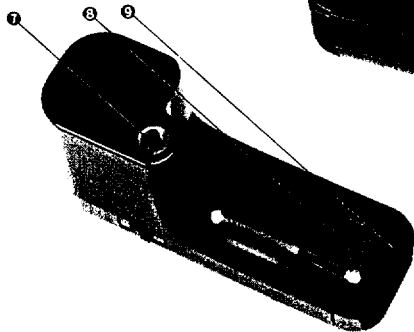

- ⑤ Handgrip
- ⑥ Lock dial
- ⑦ Tripod socket
- ⑧ Battery compartment lock
- ⑨ Battery compartment cover


BATTERY LOADING

- 1 Make sure that the winder power switch is set to OFF.
- 2 Holding the winder upside down, slide the battery compartment lock in the direction of the arrow with your fingernail and lift the cover out with your other hand.
- 3 Insert two AA size penlight batteries in the battery compartment in accordance with the (+) and (-) diagrams inside the compartment.


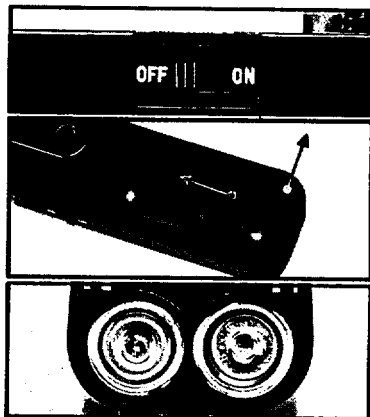


4 Replace the battery compartment cover by sliding the lock all the way back with your fingernail and snapping the cover back into place by inserting the bottom tabs **A** first, and then the top tab **B**. Let go of the lock lever to lock the cover in place.

* **Battery Check** When the film advance speed becomes slow and irregular, it indicates that batteries are worn. Replace both batteries together with fresh ones. Film will not advance if batteries are not inserted properly.

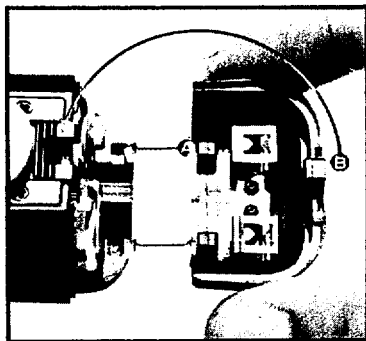

ATTACHING THE WINDER

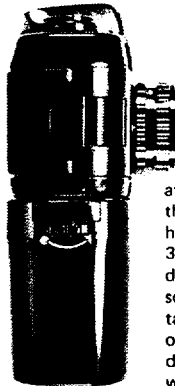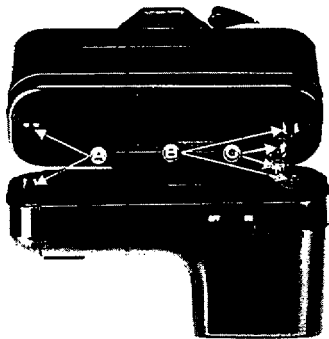

Turn off the power switch when mounting and dismounting the winder.

1 Hold the back of camera at a right angle to the winder as illustrated, matching up each of the terminals **A**, **B**, and **C** on both the winder and the camera with your eye.

2 Then, turn the camera so that it sets flat

atop the winder, making sure that all the contact points have enmeshed properly.


3 Rotate the knurled lock dial on the side of the winder so that the winder screw attaches to the tripod socket of the camera. Tighten the dial firmly to secure the winder in place.

FILM ADVANCE AND SHOOTING


With new film: After loading a fresh film cartridge into the AUTO 110, turn the winder power switch to ON. The film will advance automatically until the numeral "1" appears in the back cover window. The camera is now ready to shoot.

Note: If the winder does not function with the switch turned on, take the following steps: (1) Release the shutter by pressing the shutter button. (2) If (1) does not occur, cock the film advance lever, and press the shutter button to release the shutter. (3) If the above two steps are not successful, the batteries in the winder may be dead or are not loaded properly.

With a previously loaded film cartridge: If you attach the winder with a partially wound film cartridge already loaded in the camera, the winder will advance the film a single frame if you turn it on while the camera's film advance lever is uncocked. If the film advance lever is cocked when you turn the winder on, film will not advance until you trip the shutter.

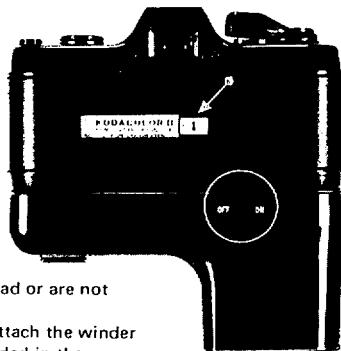

When the winder is used with the Auto 110, every time you release your finger off the shutter button after releasing the shutter, only one frame will advance. When used with the Auto 110 Super, keeping the shutter button depressed while the green LED lamp is on in the viewfinder, will make it possible to shoot consecutively. However, when the subject is dark and the yellow LED lights up, do not shoot consecutively, as otherwise improper exposure may result.

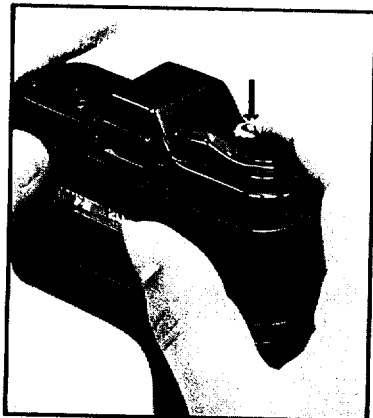

HOLDING THE CAMERA AND WINDER

Bring the camera up to your eye and, after you have focused, press the shutter release to take the picture.

Horizontal shooting posture: Hold the winder and camera firmly as illustrated when shooting horizontally.

Vertical shooting posture: For vertical shooting with the winder, the camera should be braced as illustrated for added support. There is greater tendency for camera movement to occur when shooting vertically. Your pictures will blur if you do not hold the camera firmly as indicated.



AFTER SHOOTING USING A TRIPOD


When Finished Shooting

After the last exposure has been made, the film will automatically wind out until the film end and stop. Then, turn the winder power switch to OFF and remove the cartridge.

Always attach and detach the winder with the power switch set to OFF.

Use of a Tripod

A tripod may be screwed into the tripod socket at the base of the winder grip.

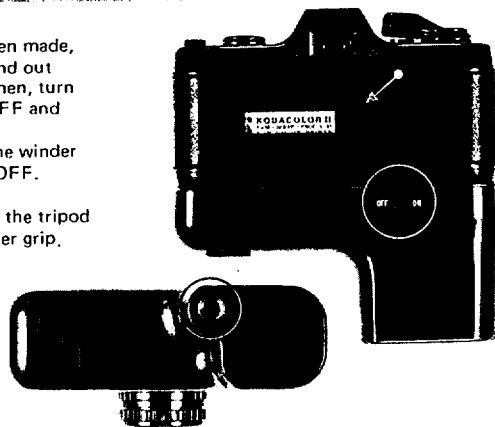



Asahi Optical Co., Ltd. C.P.O. 895, Tokyo 100-91, JAPAN
Asahi Optical Europe N.V. Weuvildaan 3-5, 1930 Zaventem Zuid-7, BELGIUM
Pentax Handelsgesellschaft mbH Postfach 54 0169, 2000 Hamburg 54, WEST GERMANY
Pentax U.K. Limited Pentax House, South Hill Avenue, South Harrow, Middlesex HA2 0LT, U.K.
Pentax France S.A. Z.I. Argenteuil, 12, Rue Ambroise-Croizat, 95100 Argenteuil, FRANCE
Pentax (Schweiz) AG Industriestrasse 2, 8305 Dietlikon ZH, SWITZERLAND
Pentax Svenska AB Hornsgatan 50A, 11721 Stockholm, SWEDEN
Pentax Nederland Spvvleld 25, 4815 HR Breda, THE NETHERLANDS
Pentax Corporation 35 Inverness Drive East, Englewood, Colorado 80112, U.S.A.
Pentax Canada Inc. 1760 West 3rd Avenue, Vancouver, B.C. V6J 1K5, CANADA
Asahi Optical Brasileira Ind. e Com. Ltda. Rua Capitão Antonio Rosa 376, Sala 121 Ed. PBK, São Paulo, BRASIL

06626 ENG

Specifications are subject to change without notice.

4/84 Printed in Japan

