

# PENTAX



## AC ADAPTOR/BATTERY CHARGER

### MODEL PV-A1000A

#### INSTRUCTION MANUAL

#### FEATURES

- Easy connection with PV-R1000A Pentax portable VTRs instead of battery.
- Battery charger for charging a rechargeable battery PV-BT01A.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrow-head symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.**

**WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

#### SPECIFICATIONS

Input:	120V ~ 50/60 Hz 35W
Output:	12V --- 1.3A (Adaptor mode) 15V --- 1.3A (Charger mode)
Dimensions:	4.2"(L) x 2"(H) x 1"(D) 182(L) x 50(H) x 25(D)mm
Weight:	0.97 lbs (440 gr)

# Important Safety Instructions

1. **Save these instructions** – This manual contains important safety and operating instructions for Battery Charger Model PV-A1000A.
2. Before using Battery Charger, read all instructions and cautionary markings on (1) Battery Charger, (2) battery and (3) product using battery.
3. **Caution** – To reduce risk of injury, charge only rechargeable battery, type PV-BT01A. Other types of batteries may burst causing personal injury and damage.
4. Do not expose charger to rain, snow or moisture.
5. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
6. To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting charger.
7. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
8. An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire and electric shock. If extension cord must be used, make sure:
  - A. That pins on plug of extension cord are the same number, size, and shape as those of plug on charger.
  - B. That extension cord is properly wired and in good electrical condition; and
  - C. That wire size should be met below:


Minimum AWG size	Length of extension cord (feet)
18	Equal to or less than 100
16	Equal to or less than 150
9. Do not operate charger with damaged cord or plug – replace them immediately.
10. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceman.
11. Do not disassemble charger; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
12. To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning.

## HOW TO USE PV-A1000A

When used with the Portable VTR, the Adaptor provides a portable video cassette recording and playback system, but without the Tuner/Timer's "off the air" recording capability. The Adaptor includes a built-in AC power adaptor that lets you power your VTR from household current, and a built-in battery charger for charging a rechargeable battery.

### To Operate VTR Using Adaptor

1. If VTR contains a rechargeable battery, remove it.
2. Insert Adaptor securely into battery compartment.
3. Connect AC cord to 120V 50/60Hz household electric socket.

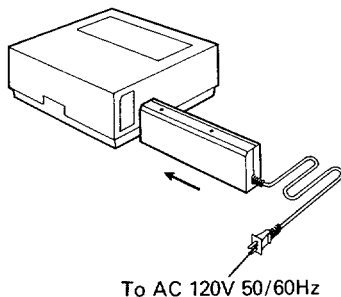


### To Charge Your Rechargeable Battery Using the Adaptor

1. Connect AC cord of Adaptor to 120V 50/60Hz household electric socket.
2. Connect optional Battery Connector PV-BA01A to Rechargeable Battery.
3. Plug Battery Connector cable into jack on the Adaptor. Charge time is approximately 1 hour. Charge indicator light glows when battery is charging.

#### Note:

1. Follow instructions in numerical order or battery will not charge.
2. PV-A1000A is designed exclusively for PENTAX portable VTR PV-R1000A. Do not use for other than specified models.
3. Do not stretch cord, etc.
4. Do not short-circuit terminal.
5. Unplug the AC cord when not in use.

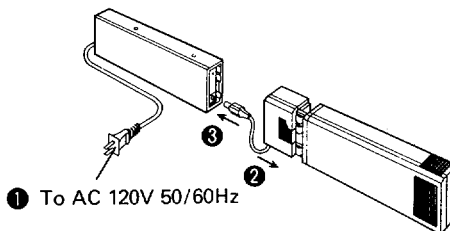



**PENTAX**

**PENTAX CORPORATION** 35 Inverness Drive East, Englewood, CO 80112  
For service information call 800 321-5245, In Colorado call 773-1101

P4640737

Printed in Japan YM-K(N)