


Thank you very much for purchasing the PENTAX Data Back Fc. The Data Back Fc is a special camera back which allows you to record data information on your photographs. Replacing the standard camera back, this Data Back has five modes, allowing you to print the selected data clearly on the film. Please read this operating manual carefully before using.

The Data Back Fc comes supplied with a factory-supplied sample battery.

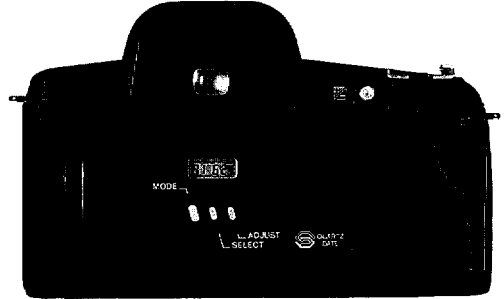


## SPECIFICATION


Camera .....	Pentax Z-10/PZ-10
Data printout .....	7-segment, 6-digit liquid crystal display (LCD)
Printout confirmation .....	"—" indication blinks for a few seconds in LCD panel
Printout position .....	On the lower right corner of the picture positioned horizontally
Character size .....	Approx. 0.75(H) × 0.45(W) mm
Printing modes .....	year/month/day, day/month/year, month/day/year, day/hour/minute, and "---" (blank). Year (87~19) = 1987~2019                      Hour = 0~23 Month (1~12) = Jan.~Dec.                      Minute = 00~59 Day = 1~31
Film speed .....	ISO 25-1600
Power source .....	CR 2025 (lithium battery)
Number of prints .....	Approx. 5,000
Size .....	139.5(W)×58(H)×21(W)mm ( 5.5" (W)× 2.3" (H)× 0.8" (W))
Weight .....	63.0g (2.2oz.) without battery
Accessory .....	Special case

**SPECIFICATIONS ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTIFICATION OR ANY OBLIGATION ON THE PART OF THE MANUFACTURER.**

## INSTALLING THE DATA BACK Fc

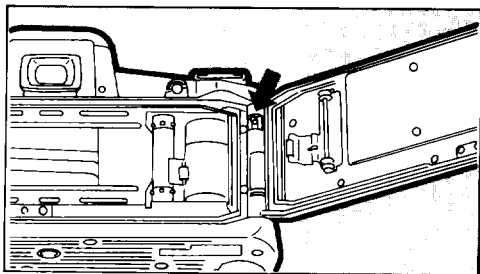

To replace the standard camera back with the Data Back Fc, open the camera back and then tilt it outward while pressing the back-cover-release pin to remove it. Store the removed camera back in the supplied case to protect it from being damaged.

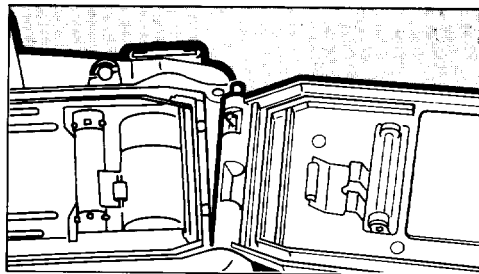


Install the Data Back Fc, first fitting its lower hinge pin to the camera, then its top hinge pin while pressing on the back-cover-release pin. Then, release the back-cover-release pin to secure it in place.


### Note:

Avoid touching the glass surfaces of the data recording window to protect against possible damage from fingerprints, dust, grit and grease. Use a blower or camel's hair brush to remove the dirt and dust on the window.


## INSERTING THE BATTERY

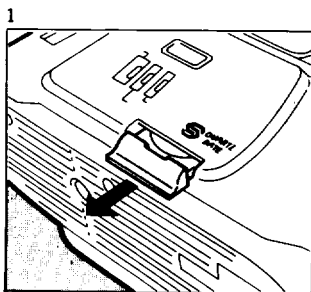

1. Remove the battery holder of the Data Back Fc by pulling it in the direction of the arrow.

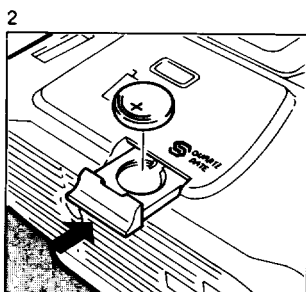

2. Place the new battery in the battery holder with its  $\oplus$  side facing up until it locks in place with a click.

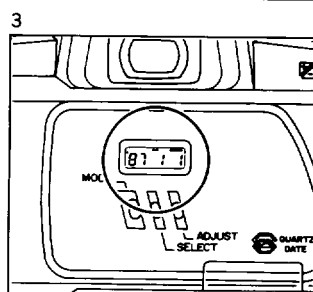


3. If the data indication does not appear in the LCD panel, it means that the battery has not been inserted properly or the battery is low.

After the battery is inserted, adjust the data by following the adjustment procedure described on next page.

● The Data Back Fc uses one lithium battery, type CR 2025.

## SETTING THE DATA

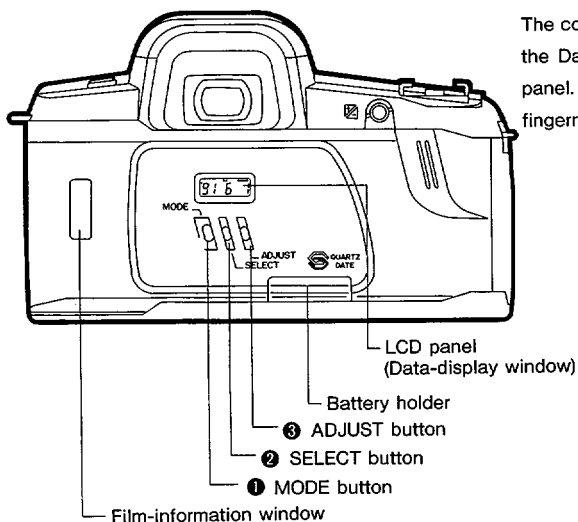

The correct time is entered via three buttons located on the Data Back. The time setting appears in the LCD panel. Carefully push these buttons with a coin or your fingernail.

### • Numerical indication

Year	= 87-19 (1987-2019)
Month	= 1-12
Day	= 1-31
Time	= 0-23
Minute	= 00-59

### Correcting the data

- At each press of the SELECT button ②, a different category of digits in the LCD panel blinks. Press the SELECT button ② until you reach the blinking digit(s) you want to change. The digit(s) will repeat their cycle in the following order as you press the SELECT button ②.

Date: Year → Month → Day

Time: Hour → Minute → : (Second)

- Press the ADJUST button ③ to change digits of the specified category you chose with the SELECT button ②. Digits increase by one each time you press the ADJUST button ③. Holding down the button will bring on continuous digit advance.

### Adjusting the data

- Press the SELECT button ② to make the year, month or day you want to change blink.
- Change the data with the ADJUST button ③.
- Press the SELECT ② button to stop the digit from blinking, after you have changed the data. The adjusted data has now been entered.

### Adjusting the hour/minute


- Press the SELECT button ② to make the hour, minute or second (:) you want to change blink.
- Change the data (hour or minute) with the ADJUST button ③.

To change the second (:), press the ADJUST button ③ while (:) is blinking, then release the button in sync with a time signal.

- Press the SELECT ② button to stop the adjusted hour/minute from blinking. The adjusted data has now been entered. The bar mark "—" appears on the LCD panel, indicating that data imprinting choices are possible.

## SWITCHING THE MODE

At each press of the MODE button **1**, the mode in the LCD panel switches as shown in the chart. When the desired data mode appears in the panel, release the button. "-----" indicates no data will be imprinted.



### Notes:

- "M" on the LCD panel indicates "Month".
- As the shutter is released, the bar mark "-" in the display blinks for a few seconds, indicating that the data has been imprinted.

## OPERATIONAL PRECAUTIONS

- The data on the LCD panel is imprinted on each frame you expose.
- "Year-Month-Day" and "Day-Hour-Minute" cannot both be imprinted at the same time.
- The working temperature for data printing is 0-50°C.
- Use DX-coded films with ISO ratings from 25-1600. When such film is loaded, the film speed is automatically set by the camera.
- If high-speed film with an ISO rating of 1000-1600 is used, the imprinted characters may blur.
- If film with an ISO rating of 50 or lower is used, the printed characters may be dark or dim.
- If you release the shutter while the blinking data is being corrected, the data cannot be imprinted even if the shutter is released.
- The Data Back Fc operates on a 3V lithium battery, type CR2025. The battery will last for approx. 3 years. If the data on a picture becomes invisible, replace the battery.
- Never try to break up or recharge the battery. Also, do not dispose of the battery in fire, as the battery may explode.
- Always keep the battery out of the reach of children.
- If the corner of the picture where the data is imprinted has a white or yellow object, the data may be difficult to see. When composing your photographs, try to avoid brightly-colored subjects in that corner.



Photographed on June 1, 1991



Asahi Optical Co., Ltd. C.P.O. 885, Tokyo 100-81, JAPAN  
Pentax Europe S.A. Welvelidse 3-6, 1830 Zaventem, BELGIUM  
Pentax Handelsgesellschaft mbH, Julius-Voelcker-Strasse, 104, 2000 Hamburg 54, GERMANY  
Pentax U.K. Limited, Pentax House, South Hill Avenue, South Harrow, Middlesex HA2 0LT, U.K.  
Pentax France Z.I. Argenteuil, 12, rue Ambroise Croizat, 95100 Argenteuil, FRANCE  
Pentax Nederland SpA/veld 25, 4615 HP Breda, NETHERLANDS  
Pentax (Schweiz) AG Industriestrasse 2, 8305 Dietlikon, SWITZERLAND  
Pentax Scandinavia AB Faltgatan 57, 75127 Uppsala, SWEDEN  
Pentax Corporation 35 Inverness Drive East, Englewood, Colorado 80112, U.S.A.  
Pentax Canada Inc. 3181 Universal Drive, Mississauga, Ontario L4X 2E5, CANADA  
Asahi Optical Brasileira Ind. e Com. Ltda. Rua Estados Unidos, 1053, São Paulo, BRASIL