

PENTAX®


645

交換フォーカシングスクリーン645の使い方

INTERCHANGEABLE FOCUSING SCREENS 645

使用説明書

1

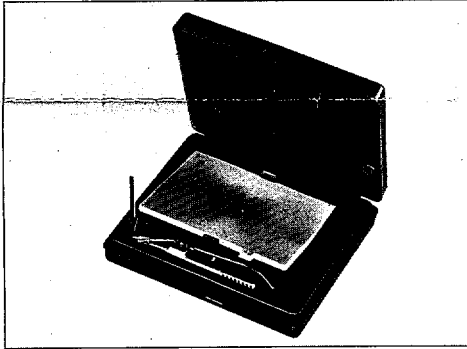


2



交換フォーカシングスクリーンの種類
Available focusing screens:


UC-21

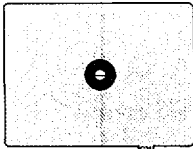

スプリットマイクロ
マット

**Matte field and split-
image spot with
microprism collar**


UA-21

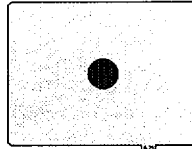

マイクロプリズム
マット

**Matte field and
microprism spot**


UB-21

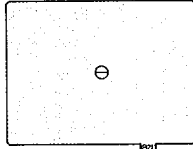

スプリットイメー
ジ
マット

**Matte field and
split-image spot**


UE-20

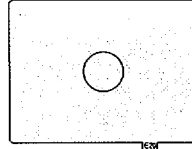

全面マット

Matte field only

UG-20

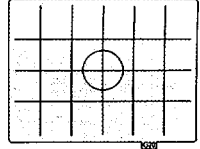

方眼マット

**Matte field and
cross hairs**

フォーカシングスクリーン〔F.S.と略す〕の交換

1. ケースを開き、写真の矢印を押すと、ピンセットが取出せます。ピンセットはつまむと、先端部が開きます。
2. ボディーからレンズをはずし、写真のようにボディーのマウント面を少し上向きにして、スクリーンロックレバーをピンセットで矢印方向にスライドさせると、F.S.が枠ごと下がります。

The focusing screens (to be abbreviated to F.S.) should be interchanged as follows:

- 1) Open the case and pick up the pincette as shown. The one end of the pincette can be opened by holding the handle with your fingers.
- 2) Remove the lens from the camera body, and place the body with the lens mount facing slightly upwards as shown.




Asahi Optical Co., Ltd. C.P.O. 895, Tokyo 100-91, JAPAN
 Asahi Optical Europe N.V. Weveldiaan 3-5, 1930 Zaventem Zuid-7, BELGIUM
 Pentax Handelsgesellschaft mbH Postfach 54 0169, 2000 Hamburg 54, WEST GERMANY
 Pentax U.K. Limited Pentax House, South Hill Avenue, South Harrow, Middlesex HA2 0LT, U.K.
 Pentax France S.A., Z.I. Argenteuil, 12, Rue Ambroise-Croizat, 95100 Argenteuil, FRANCE
 Pentax (Schweiz) AG Industriestrasse 2, 8305 Dietlikon ZH, SWITZERLAND
 Pentax Svenska AB Box 650, S-751 27 Uppsala, SWEDEN
 Pentax Nederland Spineveld 25, 4815 HR Breda, THE NETHERLANDS
 Pentax Corporation 35 Inverness Drive East, Englewood, Colorado 80112, U.S.A.
 Pentax Canada Inc. 1760 West 3rd Avenue, Vancouver, B.C. V6J1K5, CANADA
 Asahi Optical Brasileira Ind. e Com. Ltda. Rua Capitão Antonio Rosa 376, Sala 121 Ed. PBK, São Paulo, BRASIL

07051 ENG

5 / 84 Printed in Japan

3

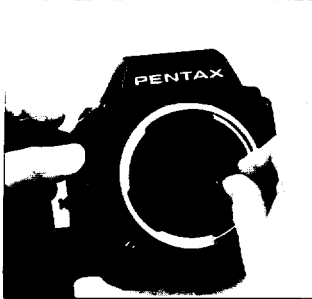

4



5



F.S.を着脱する前に、ホディーのプレビューレバーを押して、マウント内左側レバーをしゃまにならないよう下げた状態にしてください。

- 3) F.S.をピンセットで取出します。
- 4) 取出したF.S.はケースの溝に立て、交換するF.S.をピンセットでつまんで枠にのせます。
- 5) ピンセットの尾の部分で枠を押し上げると、カチッと音がして固定されます。

使用上の注意

フォーカシングスクリーンには手をふれないでください。フォーカシングスクリーンはプラスチック製ですから、清掃はブローでゴミを吹き払うだけにしてください。こするとキズがつく恐れがあります。フォーカシングスクリーンをつまむときは、付属のピンセットでフォーカシングスクリーンのつまみの部分をはさんでください。

When replacing the F.S., keep depressing the preview lever on the camera body so that the preview lever inside the lens mount will not be in the way.

- 3) Take the F.S. out with the pincette.
- 4) Stand the F.S. up in the case's slot. Place the other F.S. on its frame using the pincette.
- 5) While pushing the frame upwards with the other end of the pincette, you can hear a "catching" sound. It will then be fixed in place.

Precautions for Use

Do not touch the focusing screen directly with your fingers. Because the focusing screen is made of plastic, clean it by using only a blower. If you don't, you may scratch the surface. There is a place on the outside of the screen that is meant to be grasped by pincette. Use only pincette, grasping that part, when you handle the screen.



旭光学工業株式会社

●174 東京都板橋区池野町2丁目36番9号 (560)5151(代)

旭光学商事株式会社

●108 東京都千代田区永田町1丁目11番1号 (580)2051(代)

●お問い合わせは次の各所へ

| | | |
|-------------|----------------------------------|-------------------------|
| ペンタックスフォーラム | 〒104 東京都新宿区西新宿2丁目1番1号 新都三井ビル(4階) | ☎ 03(348)2941(代) (品島厚志) |
| 東京サービスセンター | 〒104 東京都中央区銀座西8丁目10番地 | ☎ 03(571)5621(代) |
| 札幌サービスセンター | 〒060 札幌市中央区南大通西11丁目4番27号 | ☎ 011(241)8742(代) |
| 仙台サービスセンター | 〒980 仙台市中央2丁目2番10号 仙台会館 | ☎ 0222(61)5681(代) |
| 横浜サービスセンター | 〒231 横浜市中区不老町1丁目4番8号 黎明ビル | ☎ 045(881)8771(代) |
| 名古屋サービスセンター | 〒461 名古屋市中区東1丁目19番9号 | ☎ 052(862)5331(代) |
| 大阪サービスセンター | 〒542 大阪市南区南船場1丁目17番9号 | ☎ 06(271)7986(代) |
| 広島サービスセンター | 〒730 広島市中区中町8番12号 広島グリーンビル | ☎ 082(248)4321(代) |
| 福岡サービスセンター | 〒810 福岡市博多区中洲中島町3番8号 | ☎ 092(281)6888(代) |
| 新潟サービスセンター | 〒951 新潟市本町通七番町153番地 日本出版新潟ビル | ☎ 0252(24)8391(代) |
| 静岡サービスセンター | 〒420 静岡市伝馬町24番2号 住友建設ビル | ☎ 0542(55)6308(代) |
| 金沢サービスセンター | 〒920 金沢市尾張町2丁目30番22号 大澤生命ビル | ☎ 0762(22)0501(代) |
| 高松サービスセンター | 〒760 高松市殿心町6番地12 福田ビル | ☎ 0878(21)7650(代) |
| ●消費税相談室 | 〒104 東京都中央区銀座西8丁目10番地 | ☎ 03(572)6479(直通) |

☆記載内容の仕様などの一部が変更される場合があります。

01-8405